

[Home](#)
[Geavanceerde instellingen](#)
[Hulpmiddelen](#)
[Netwerk status](#)
[Beheer](#)

Connect Box status voor monteurs

Status	Downstream	Upstream	Configuratie	Netwerk historie
--------	-------------------	----------	--------------	------------------

[> Ververs gegevens](#)

Gebundelde downstream-kanalen

Kanaal	Frequentie (Hz)	Vermogen (dBmV)	SNR (dB)	Modulatie	Kanaalnummer
1	834000000	0.9	38	256 qam	30
2	602000000	2.4	40	256 qam	1
3	610000000	2.5	40	256 qam	2
4	642000000	0.7	38	256 qam	6
5	658000000	1.4	39	256 qam	8
6	666000000	1.2	38	256 qam	9
7	674000000	1	38	256 qam	10
8	682000000	1.2	38	256 qam	11
9	690000000	2	38	256 qam	12
10	698000000	2.7	40	256 qam	13
11	706000000	3.2	40	256 qam	14
12	714000000	2.9	38	256 qam	15
13	722000000	2.7	40	256 qam	16
14	730000000	2.4	40	256 qam	17
15	738000000	1.9	38	256 qam	18
16	746000000	1.7	38	256 qam	19
17	754000000	1.7	40	256 qam	20
18	794000000	2	38	256 qam	25
19	802000000	1.7	38	256 qam	26
20	810000000	1.5	40	256 qam	27
21	818000000	1.2	38	256 qam	28
22	826000000	1	38	256 qam	29
23	842000000	0.4	38	256 qam	31
24	850000000	0.2	38	256 qam	32

Gebundelde downstream-kanalen

Kanaal	Locked Status	RxMER (dB)	Fouten voor RS	Fouten na RS
1	Locked	38.9	2551	0

Kanaal	Locked Status	RxMER (dB)	Fouten voor RS	Fouten na RS
2	Locked	40.9	670	0
3	Locked	40.3	655	0
4	Locked	38.9	2698	0
5	Locked	39.3	1676	0
6	Locked	38.9	2596	0
7	Locked	38.6	2819	0
8	Locked	38.9	2207	0
9	Locked	38.9	1211	0
10	Locked	40.3	839	0
11	Locked	40.3	1157	399
12	Locked	38.9	941	0
13	Locked	40.3	811	0
14	Locked	40.3	995	0
15	Locked	38.9	1400	0
16	Locked	38.9	1468	0
17	Locked	40.3	1361	0
18	Locked	38.9	1323	0
19	Locked	38.9	1323	0
20	Locked	40.3	1516	0
21	Locked	38.9	2320	0
22	Locked	38.6	2421	0
23	Locked	38.9	3314	0
24	Locked	38.9	3871	0