

Home

Connect Box status voor monteurs

Geavanceerde
instellingen

Hulpmiddelen

[Netwerk status](#)

Beheer

Status

Downstream

Upstream

Configuratie

Netwerk historie

[> Ververs gegevens](#)

Gebundelde downstream-kanalen

Kanaal	Frequentie (Hz)	Vermogen (dBmV)	SNR (dB)	Modulatie	Kanaalnummer
1	834000000	5	38	256 qam	30
2	602000000	6	40	256 qam	1
3	610000000	5.5	40	256 qam	2
4	642000000	5.5	40	256 qam	6
5	658000000	5	38	256 qam	8
6	666000000	4.4	38	256 qam	9
7	674000000	4.5	38	256 qam	10
8	682000000	5.1	38	256 qam	11
9	690000000	6.1	38	256 qam	12
10	698000000	6.8	40	256 qam	13
11	706000000	6.8	40	256 qam	14
12	714000000	6.1	38	256 qam	15
13	722000000	5.8	40	256 qam	16
14	730000000	5.5	40	256 qam	17
15	738000000	5.3	38	256 qam	18
16	746000000	5.5	40	256 qam	19
17	754000000	5.8	40	256 qam	20
18	794000000	6	40	256 qam	25
19	802000000	6.1	38	256 qam	26
20	810000000	6	40	256 qam	27
21	818000000	5.6	38	256 qam	28
22	826000000	5.3	38	256 qam	29
23	842000000	4.5	38	256 qam	31
24	850000000	4.4	38	256 qam	32

Gebundelde downstream-kanalen

Kanaal	Locked Status	RxMER (dB)	Fouten voor RS	Fouten na RS
1	Locked	38.9	2648	1287

Kanaal	Locked Status	RxMER (dB)	Fouten voor RS	Fouten na RS
2	Locked	40.9	698	1768
3	Locked	40.3	701	1278
4	Locked	40.3	2764	2038
5	Locked	38.9	6165	18040
6	Locked	38.6	2624	1631
7	Locked	38.9	15081	19740
8	Locked	38.9	14357	20387
9	Locked	38.9	13502	20166
10	Locked	40.3	12676	19680
11	Locked	40.9	8892	18829
12	Locked	38.9	7339	17072
13	Locked	40.3	5002	16966
14	Locked	40.3	6621	16223
15	Locked	38.9	12787	16788
16	Locked	40.3	14374	17515
17	Locked	40.3	13878	17222
18	Locked	40.3	4967	27806
19	Locked	38.9	4191	24441
20	Locked	40.3	4395	26745
21	Locked	38.9	5262	29634
22	Locked	38.6	11097	16629
23	Locked	38.6	13623	17597
24	Locked	38.9	13972	18043